

Shugart SA455 - Jumper settings

I have gathered the following information to the best of my knowledge and belief. However, errors cannot be excluded. The use of this information is always at the user's own risk!

JUMPER/ DESIGNATION	DESCRIPTION	SHIPPED FROM FACTORY	
		OPEN	SHORT
DS1	DRIVE SELECT 1		
DS2,3,4	DRIVE SELECT 2,3,4		
DS	ENABLE DRIVE SELECT IN A MULTI-DRIVE SYSTEM		
MX	CONSTANT DRIVE SELECT USED IN A SINGLE DRIVE SYSTEM ONLY		
MS	ENABLES DRIVE MOTOR WITH DRIVE SELECT		
MM	ENABLES DRIVE MOTOR WITH MOTOR ON		
HL	HEAD LOAD (Not Used)		
HM	HEAD LOAD WITH MOTOR ON (Not Used)		
HS	HEAD LOAD WITH DRIVE SELECT (Not Used)		
IU	IN USE, ACTIVITY LIGHT WITH "UO" AND HEAD LOAD		

SHUGART DOES NOT OFFER HEAD LOAD

39409-03

JUMPER/ DESIGNATION	DESCRIPTION	SHIPPED FROM FACTORY	
		OPEN	SHORT
DR	ENABLES DRIVE READY WITH DRIVE SELECT		
RR	RADIAL READY		
RY	CONNECTS READY TO INTERFACE		
SS	SIDE SELECT NOT DELAYED		
SO	SIDE SELECT DELAYED TO ALLOW ERASE TO COMPLETE BEFORE SWITCHING SIDES		
UO	ACTIVITY LIGHT WITH "IN USE" AND HEAD LOAD		
DS	ACTIVITY LIGHT WITH DRIVE SELECT		
HD	PROVIDES PULL UP FOR HEAD LOAD INTERFACE LINE		

39402-04

my system IBM PC/XT286 5162

controller IFSP v1.2

settings DS1, DS, MM, HS, DR, RY, DS, SO